


## SashMag Installation Instructions

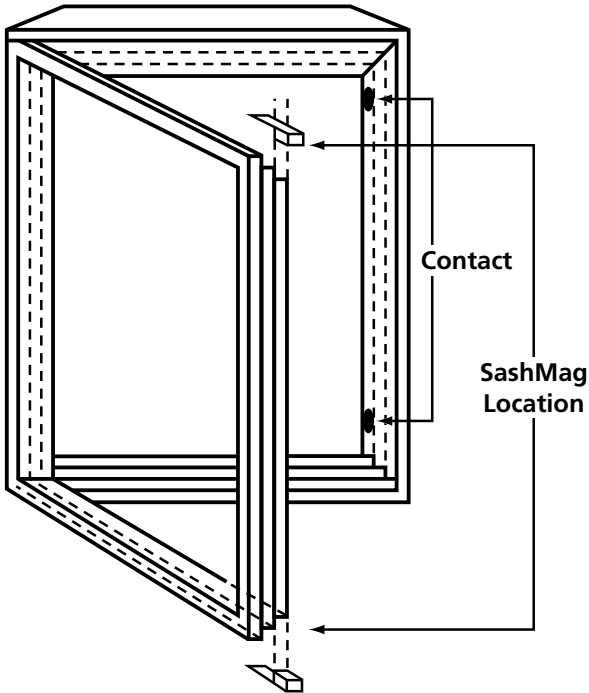

### TIPS

1. Always clean surface area where tape is to be applied.
2. Use only Nascom switches with SashMags to achieve the best possible gap.
3. Gap distances between contact and SashMag will vary between windows. Position switch and SashMag within 3/4" of an inch of each other.

### INSTALLATION

1. Fit SashMag in manufacturer's provided cut-out of side-sliding vinyl windows, single-hung vinyl window, and some sliding vinyl doors.
2. Fit SashMag on top, or under the inside edge of casement windows.

### NOTE:

Though the SashMag will extend past the window, it will still close in most cases.

